

VISTA not booting up

This indicates that the SD memory card is not being read. Either the card is not fully inserted or it has become corrupted. Please remove the right side cover, locate the SD card on the SBC, eject then re-insert. Power up and let me know if this solves the issue.